


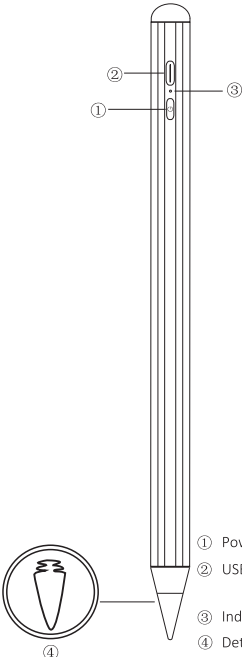
User's Guide

Active Pen for iPad



Please read this manual completely and keep it carefully. Note: The image is for reference only and its appearance depends on the actual product.

Product details



- ① Power Button
- ② USB-C charging port
- ③ Indicator light
- ④ Detachable lead

Product characteristics

Model name: Active Pen
Material: Aluminium alloy
Anti-spill touch function: Yes
Power supply: 5V-0.2A
Tilt pressure sensation : Yes
Bluetooth: No
Lead : Replaceable lead

Compatible model:

ipad 2018 (version6) A1893/A1954
ipad 2019 (version7) A2197/A2200/A2198
ipad 2020 (version8) A2270/A2428/A2429/A2430
ipad 2021 (version9) A2602/A2603/A2604/A2605
iPad 2022 (version10) A2696/A2757/A2777
ipad mini (version5) A2133/A2124/A2126/A2125
ipad mini (version6) A2567/A2568/A2569
ipad Air (version3) A2152/A2123/A2153/A2154
ipad Air (version4) A2316/A2324/A2325/A2072
ipad Air (version5) A2588/A2589/A2591
ipad Pro (11 pouces) A1980/A2013/A1934/A1979
ipad pro 11 pouces (version2) A2228/A2068/A2230/A2231
ipad pro 11 pouces(version3) A2377/A2301/A2459/A2460
ipad Pro 12.9 pouces (version3) A1983/A2014/A1895/A1876
ipad pro 12.9 pouces (version4) A2229/A2069/A2232/A2233
ipad pro 12.9 pouces (version5) A2378/A2379/A2461/A2462
iPad pro 12.9 pouces (version6) A2436/A2764/A2437/A2766


Please note that the above models are common, other models are not valid, you can check the model on the back of the iPad device.

Product features

- Simple and elegant design, aluminium alloy material.
- Replaceable pen lead.
- The lead is made from a specific conductive material, with a smooth tip to prevent damaging the screen.
- The product is compatible with iPad models from 2018 (see product specifications for specific models), which can write, draw and record.
- Continuous use for up to 8 hours, with automatic power-off after 5 minutes of inactivity.


Before using

- The version of the iPad must not be lower than 12.2.
- Open Settings > Apple Pencil > Disable Apple Pencil use for drawing only.
- Turn on Settings > Bluetooth and disable the original Apple Pen connection.
- (Once the above settings have been made, the product can be used normally).

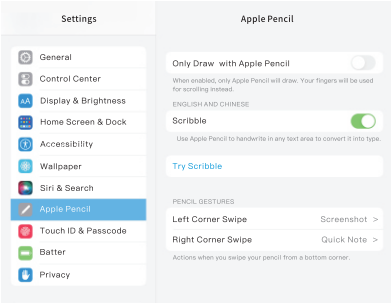


How to use your active pen


- Press the power button to switch the pen on. Press the power button once more to turn it off.

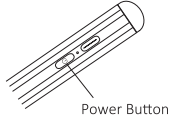

- With the magnetic attachment feature, the pen can be attached to the tablet.

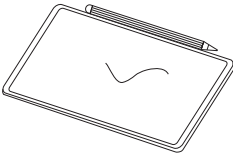


- Detachable and replaceable lead, no need to worry about wear and tear! (Turn the lead slightly to remove or install it easily).

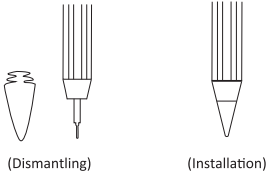

How to recharge


- Use a micro USB-C charging cable to charge. Connect one end to the pen's USB port, and the other end to the computer's or tablet's USB port (FIG 1)
- You can also connect one end of the charging cable to the pen and the other end to the 5V DC power adapter. (FIG 2)
- With a 5V portable battery, connect directly to the touch pen for charging. During the charging process, the red charging indicator will light up and the total charging time is approximately 90 minutes. (FIG 3)

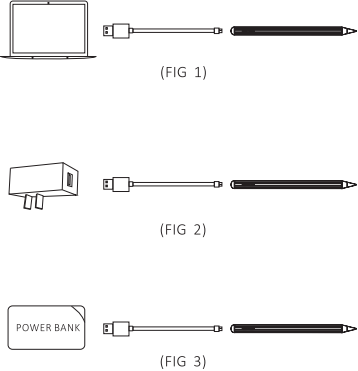

CE RoHS FC


Guide de l'utilisateur

Styler Actif pour iPad



Veuillez lire entièrement ce mode d'emploi et le conserver soigneusement. Remarque : l'image est présentée à titre de référence uniquement, et son apparence dépend du produit réel.

Détails du produit

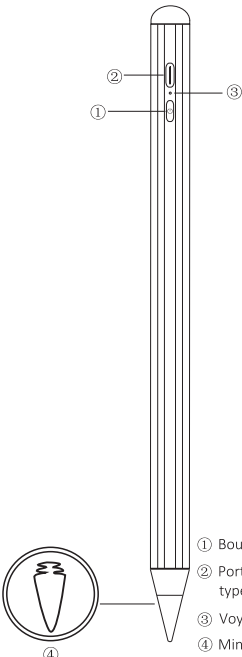

- ① Bouton on/off
- ② Port de chargement type USB-C
- ③ Voyant lumineux
- ④ Mine détachable

Caractéristiques du produit

Nom du modèle : Styler Actif
Matériau : alliage d'aluminium
Fonction tactile anti-accidentelle : Oui
Alimentation : 5V-0.2A
Sensation de pression à l'inclinaison : Oui
Bluetooth : Non
Mine : Mine remplaçable

Modèle compatible:

ipad 2018 (version6) A1893/A1954
ipad 2019 (version7) A2197/A2200/A2198
ipad 2020 (version8) A2270/A2428/A2429/A2430
ipad 2021 (version9) A2602/A2603/A2604/A2605
iPad 2022 (version10) A2696/A2757/A2777
ipad mini (version5) A2133/A2124/A2126/A2125
ipad mini (version6) A2567/A2568/A2569
ipad Air (version3) A2152/A2123/A2153/A2154
ipad Air (version4) A2316/A2324/A2325/A2072
ipad Air (version5) A2588/A2589/A2591
ipad Pro (11 pouces) A1980/A2013/A1934/A1979
ipad pro 11 pouces (version2) A2228/A2068/A2230/A2231
ipad pro 11 pouces(version3) A2377/A2301/A2459/A2460
ipad Pro 12.9 pouces (version3) A1983/A2014/A1895/A1876
ipad pro 12.9 pouces (version4) A2229/A2069/A2232/A2233
ipad pro 12.9 pouces (version5) A2378/A2379/A2461/A2462
iPad pro 12.9 pouces (version6) A2436/A2764/A2437/A2766

Veuillez noter que les autres modèles ne sont pas compatibles. Merci de vérifier le modèle de votre iPad au dos de celui-ci.


Fonctionnalités du produit

- Design simple et élégant, matériau en alliage d'aluminium.
- Mine de stylo remplaçable.
- La mine est fabriquée dans un matériau conducteur spécifique, avec une pointe lisse pour ne pas endommager l'écran.
- Le styler est compatible avec les modèles d'iPad datant de 2018 minimum (voir la partie "Caractéristiques du produit").
- Utilisation continue jusqu'à 8-10 heures (pour référence uniquement), mise hors tension automatique au bout de 5 minutes de non utilisation.

Avant d'utiliser


- La version de l'iPad ne doit pas être inférieure à 12.2 ;
- Ouvrez Réglages > Apple Pencil > Désactiver l'utilisation d'Apple Pencil uniquement pour le dessin.
- Activez Réglages > Bluetooth et désactivez la connexion de l'Apple Pen original.

(Une fois les réglages ci-dessus effectués, le produit peut être utilisé normalement).

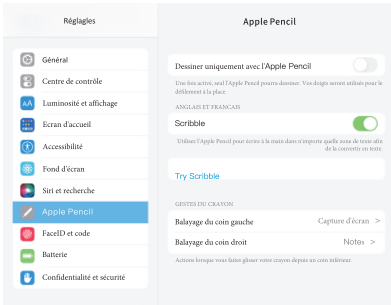


Comment utiliser votre styler actif


- Appuyez sur le bouton pour allumer le styler; appuyez à nouveau sur le bouton pour l'éteindre.

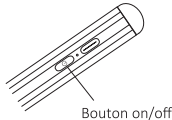

- Avec la fonction de fixation magnétique, le styler peut être accroché au bord de la tablette.

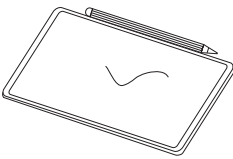


- Mine détachable et remplaçable, plus besoin de s'inquiéter de l'usure ! (Tournez légèrement la mine pour la retirer ou l'installer facilement).

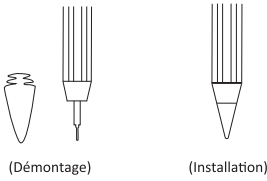

Comment recharger

- Utilisez un câble de rechargement de type micro USB-C pour recharger. Connectez une extrémité au port usb du styler, et l'autre extrémité au port usb de l'ordinateur ou de la tablette. (FIG 1)
- Vous pouvez également connecter une extrémité du câble de chargement au styler et l'autre extrémité à l'adaptateur d'alimentation 5V DC. (FIG 2)
- Avec une batterie portable de 5V, branchez directement sur le stylo tactile pour la charge. Pendant le processus de charge, le témoin de charge rouge s'allume et le temps de charge total est d'environ 90 minutes. (FIG 3)

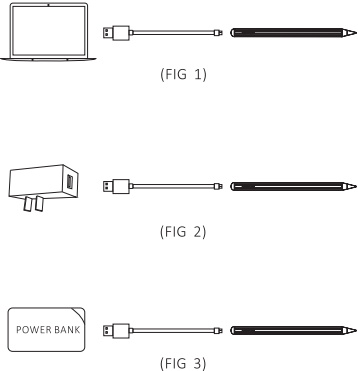

CE RoHS FC